

• CS connect s to our SPI Chip Select pin. We'll be using Digita I 4 but you can later change this to any pin
• RST connec ts to our radio reset pin. We'll be using Digita I 2 but you can later change this pin too. • G0 (IRQ) conne cts to an interruptcapable
pin. We'll
be
using Digita
1 3 but you can later change this pin too. However, it must connect a hardware Interrupt pin. Not all pins can do this! Check the board documenta tion for which pins are hardware interrupts, you'll also need the hardware interrupt number. For example, on UNO digital 3 is interrupt

#1

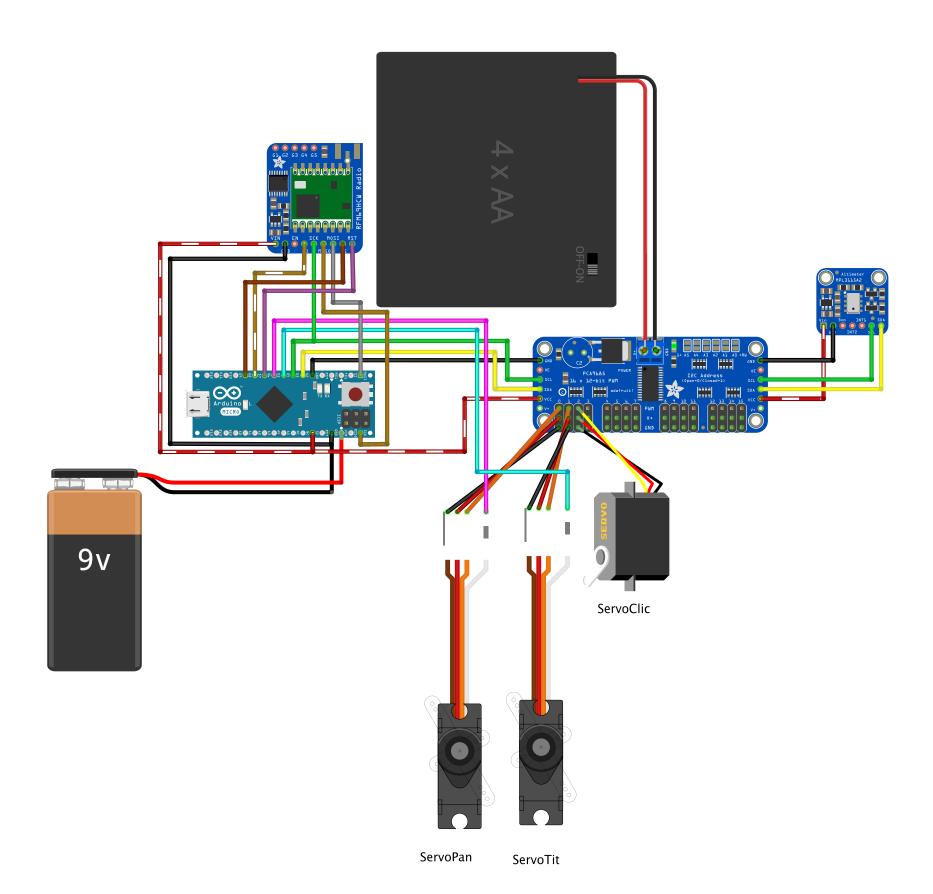

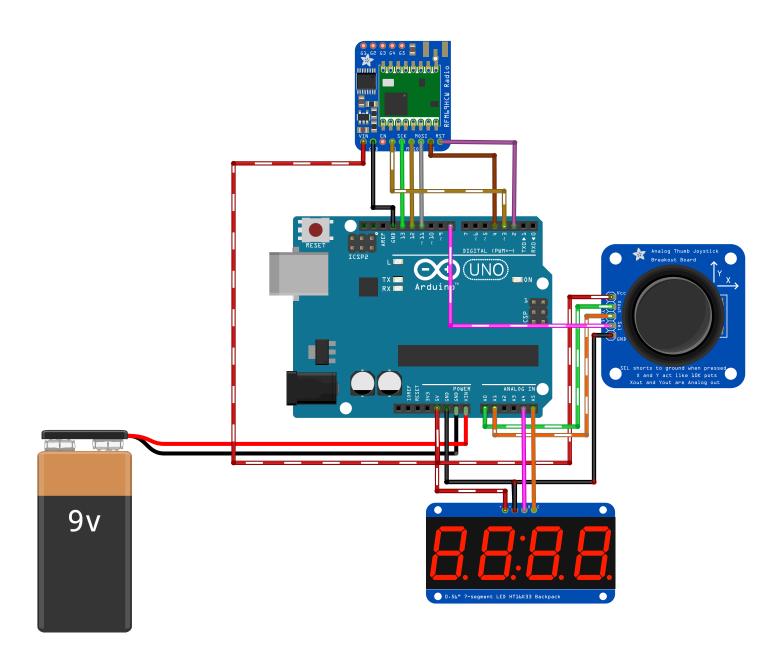

En vrai, du 6x1,5V